


# Ehrman Industries, LLC

## 2-Pole Connection Instructions


Attach the flat 2 pole connector wiring harness with the 5/16" grounding loop terminal to the frame of the trailer. This loop terminal can easily be grounded to the trailer by slipping it over the tail light bolt and securing it with the tail light nut.

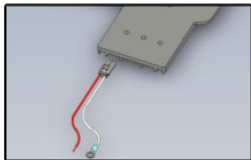

Connect the unstripped second wire from the flat 2 pole connector to the tail light power lead (not turn signal power lead) of the trailer using the blue weather resistant tap splice.

For best results, once the terminal is fully installed, wrap it with electrical tape.

Once the grounding and the power connections are complete, connect the 2 pole connector from the trailer to the 2 pole connector of the mounted Plate Saver™. Push firmly together as displayed in picture below.



When connecting the trailer wiring harness to the towing vehicle, the Plate Saver™ light should illuminate with the trailer tail lights.